



Towing and Suspension Solutions

854538-02 06-15

StowMaster™ shoulder bolt replacement kit

part number 910003-15

Installation instructions

All specifications are subject to change without notice.

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 800-669-9690 Fax: 360-735-9300 www.roadmasterinc.com

⚠ CAUTION

Read the instructions before installing the kit components. Failure to understand how to install this product could result in property damage.



Kit components

This kit contains the replacement components for two StowMaster collar shoulder bolts and one yoke shoulder bolt –

- (2) collar shoulder bolts
- (1) yoke shoulder bolt (3) Nylock nuts
- (2) 3/4" diameter acetyl washers

Required tools

- One 9/16" socket wrench
- One 1/4" Allen wrench

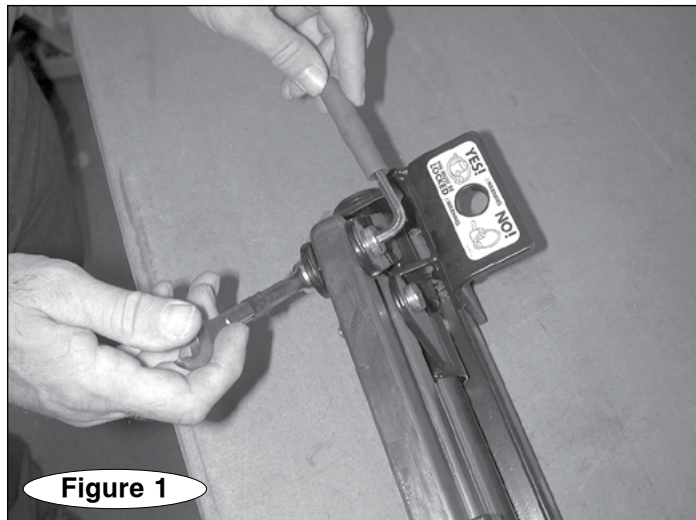


Figure 1

Installation instructions

1. Using the 1/4" Allen wrench and 9/16" socket wrench, remove one of the original collar shoulder bolts (Figure 1); install the replacement bolt and Nylock washer. Repeat for the other collar shoulder bolt.
2. Remove the yoke shoulder bolt (Figure 2), position the replacement acetyl washers in the grooves on either side of the tow bar arm (inset, Figure 2) and attach the replacement yoke shoulder bolt and Nylock nut.

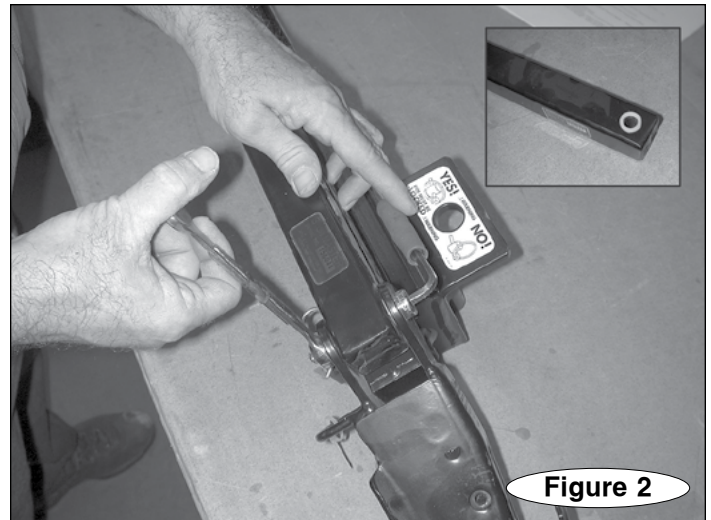


Figure 2

IMPORTANT NOTICE! Safety Definitions

These instructions contain information that is very important to know and understand. This information is provided for **safety** and to **prevent equipment problems**. To help recognize this information, observe the following symbols:

⚠ WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in property damage, serious personal injury or even death.

⚠ CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in property damage, or minor or moderate personal injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTE

Refers to important information and is placed in italic type. It is recommended that you take special notice of these items.

910003-15

StowMaster™ shoulder bolt
replacement kit

Installation instructions

