



Time Tested • Time Proven


856013-01 06.19

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 800-669-9690 Fax 360-735-9300 www.roadmasterinc.com

Tow bar adapter kit

part number 030

Adapts Blue Ox motorhome-mounted tow bars to Roadmaster direct-connect style baseplates, or to a crossbar.

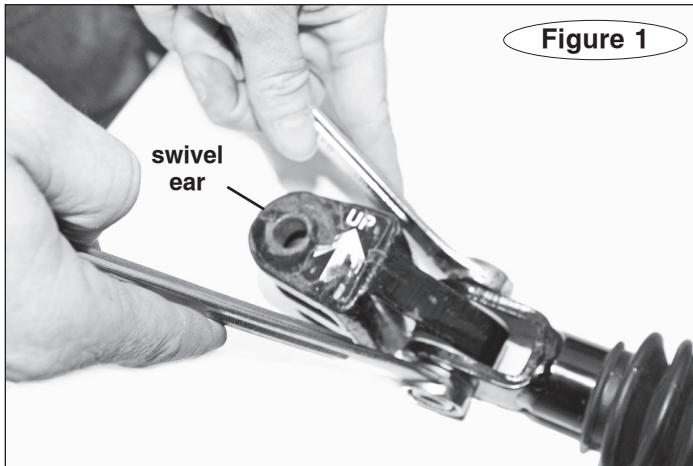

! WARNING
Read all instructions before installing this kit. Failure to understand how to properly install the kits could result in property damage, personal injury or even death.



Installation instructions

1. Working on one side at a time, disconnect the swivel ear from the end of the tow bar arm by removing the shoulder bolt, two plastic washers and the lock nut (Figure 1). Retain the hardware, as it will all be used in the following steps.
2. Place the Roadmaster adapter between the ears in the end of the tow bar. Place plastic washers on both sides of the adapter to fill the gap (Figure 2).
3. Insert the bolt through the ear, washers and adapter (Figure 3). Place Loctite Red ® on the threads of the shoulder bolt and then tighten the lock nut on the bolt.
4. Repeat for the other tow bar arm.
5. Figure 4 shows the completed installation.

